



# P-settings LT-01 Display

Press and hold  +  to enter Programming

Press  to change Program number

Press  to change option

(CODE: 1500)

P-SETTINGS	
P0	Tire diameter (10 = 10 inch). Do not change.
P1	Controller shut-down voltage. Default set to 52V (minimum is 48V – we recommend 52V to preserve battery life).
P2	Motor magnetic pole setting. Default is 40. Do not change.
P3	Speed signal selection. Default is 0. Do not change.
P4	Distance / speed unit. 0=km, 1=miles
P5	Start setting. 1=non-zero start (Kick-and-Go), accelerator won't work if scooter not in motion; 0=immediate start (CAUTION while using this!)
P6	Cruise control. 0=cruise control OFF, 1=cruise control ON.
P7	Initial acceleration. 0=strong, 1=soft.
P8	Electric (regenerative) braking (E-ABS). 0=E-ABS off, 1=E-ABS on
P9	Speed limit as % of top speed, i.e. 100=no speed limit.
PA	Clear total distance travelled (ODO).
PB	Scooter auto-turn off time in minutes.
PC	Display brightness (1=low, 3=high)